



owa344 Platform

THE owa344 IS THE PERFECT PLATFORM FOR CONTROLLING AND MONITORING YOUR INDUSTRIAL MACHINES AND VEHICLES

FEATURES		
	owa344A	owa344I
Processor/MHz	ARM Cortex A7 32-bit 792MHz	ARM Cortex A7 32-bit 792MHz
Yocto / Linux OS	Yocto Kirkstone 4.0 / Kernel 5.10.72	Yocto Kirkstone 4.0 / Kernel 5.10.72
RAM	512MB DDR3	512MB DDR3
FLASH	512MB NAND Flash	512MB NAND Flash
GNSS	YES	
LTE Cat 1 bis	YES	YES
DIGITAL OPEN-DRAIN OUTPUT	6	6
DIGITAL HIGH SIDE OUTPUT ⁽⁶⁾	2	2
DIGITAL INPUT ^{(1) (2) (5)}	9	9
ANALOG INPUTS ⁽¹⁾	4	4
RS232 ⁽⁴⁾	2	2
ACCELEROMETER	3-axis	
CAN 1	YES	
KLINE ^{(3) (7)}	YES	
RS485		YES
USB 2.0	YES	YES
ETHERNET	YES	YES
2 nd ETHERNET		YES
ANTENNA CONNECTOR	FAKRA	SMA
ENCLOSURE	SCREW MOUNT	DIN RAIL
OPTIONAL FEATURES		
CAN 2 ⁽²⁾	OPTIONAL	
2 ND RS485 ^{(4) (7)}		OPTIONAL
8GB EMMC	OPTIONAL	OPTIONAL
TPM 2.0	OPTIONAL	OPTIONAL
INTERNAL ANTENNAS	OPTIONAL	
OPTIONAL BATTERY 2000mAh	OPTIONAL	OPTIONAL

Notes:

- (1) Analog Inputs are multiplexed in the main connector with DIOs (DIO0/AIN0 - DIO1/AIN1 - DIO2/AIN2 - DIO3/AIN3).
- (2) CAN2 is multiplexed with DIO_2 and DIO_4, devices with CAN2 will not mount DIO_2 and DIO_4.
- (3) When Kline is enabled, RS-485 is disabled (SW Selected). 2nd RS485 is incompatible with Kline.
- (4) 2nd RS-485 is multiplexed with 2nd RS-232.
- (5) iButton is multiplexed with DIO_6 and can be used one or the other but not both simultaneously.
- (6) High Side I/Os are multiplexed with the Current Meter, only one HW, cannot work simultaneously.
- (7) Kline is multiplexed with the 2nd RS-485, only one HW, cannot work simultaneously.